



inBuilt.



DECORATIVE BATTENS

Brochure

www.inbuilt.com.au



InBuilt pre-finished **DECORATIVE BATTENS** provide a warm and rich texture appearance for a wide variety of panelling, ideal for wall and ceiling applications in either a vertical or horizontal set-out, creating strong directional lines that will add a striking feature to any internal commercial space.

Made from E-Zero MDF and wrapped in decorative overlay inBuilt pre-finished decorative battens impart the realism, warmth, and character of timber, providing a durable and cost-effective solution.

A finished product, ready to fabricate and assemble with no extra manufacturing costs.

Pre-finished and Ready to Install

- Easy to clean and stain-resistant
- Australian Made and Owned
- Cost-effective, no manufacturing costs
- Pre-finished product
- Ready to fabricate and assemble

Applications

- Ceiling linings
- Wall linings
- Screenings
- Feature panelling
- Curved structures

Profiles



Standard Batten
17mm x 38mm x 2700mm
31mm x 65mm x 2700mm



Half Round Batten
17mm x 34mm x 2700mm



Cove Batten
17mm x 34mm x 2700mm

Colours




Natural Wood



Tasmanian Oak



Perugian Walnut

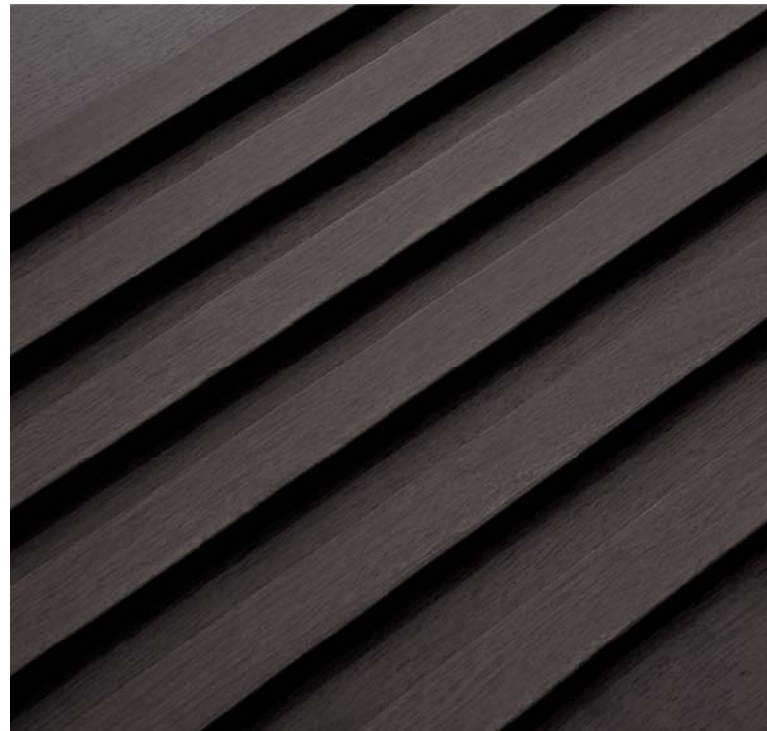

Specifications

Size	Colour	Pack	Item No
Standard Batten			
17mm x 38mm x 2700mm	Natural Wood	5	093017
	Perugian Walnut		493218
	Tasmanian Oak		493170
	Black Woodgrain		093018
31mm x 65mm x 2700mm	Natural Wood	3	093019
	Perugian Walnut		493195
	Tasmanian Oak		493261
	Black Woodgrain		093020
Half Round Batten			
17mm x 34mm x 2700mm	Natural Wood	4	493185
	Perugian Walnut		493248
	Tasmanian Oak		493260
Cove Batten			
17mm x 34mm x 2700mm	Natural Wood	5	493204
	Perugian Walnut		493200
	Tasmanian Oak		493143



INSTALLATION GUIDELINES

Decorative Battens

Considerations

- Strictly for internal use, not for use in exterior applications, including alfresco areas.
- Should not be used in wet areas such as bathrooms or environments of high humidity.
- inBuilt Decorative Battens are a nonstructural product developed for decorative purposes only.
- Can be cut to length, however, should not be cut in a lineal direction. It is recommended to protect cut edges from moisture ingress.
- Avoid applications where product may be susceptible to high traffic.
- inBuilt Decorative Battens should not sit on a floor as wet mopping and vacuum cleaners are likely to cause damage.

Fixing

- inBuilt does not offer a proprietary fixing system for decorative battens. Subject to your specific application there are many fixing possibilities.
- We recommend using a fixing technique or system ordinarily used for natural timber for either wall or ceiling; keeping in mind that MDF/LDF may need to be pre-drilled. You can use Tec7 X-TACK Extreme Bonding Without Support, alongside screw fixing or without.
- **Note:** Flexible adhesive should be applied in a continuous bead along the batten.
- When fixing inBuilt battens in a three sided application ensure the decorative joint overlap is facing the ceiling or wall.

Care & Maintenance

- inBuilt Decorative Battens are manufactured using decorative overlays. These overlays should be handled with care as a veneered or painted surface would be.
- May be wiped down regularly in the direction of the grain using a damp soapy soft non-abrasive cloth ensuring care is taken not to rub or wipe too hard.
- Dry immediately using a soft cloth so as not to leave any residue on the product.



CARE & MAINTENANCE

inBuilt's range of products are manufactured from the highest quality materials and designed to provide years of trouble free service.

inBuilt products are made from Moisture Resistant Medium Density Fibreboard (MR MDF) and particleboard substrates and as with any wood based panel cannot be made totally waterproof, of which care should be taken to wipe up spills immediately, ensuring the products are not exposed to high or continuous levels of moisture, steam and humidity.

General Cleaning

Step 1. Wipe down using a damp soft cloth containing warm soapy water, followed by drying using a soft or microfibre cloth so as not to leave any residue on the door or panel. If this is sufficient there is no need for any further action.

Step 2. For more stubborn stains, use a good quality streak free glass cleaner as per the manufacturers recommendation. You may also use Methylated Spirit on a soft cloth, using a circular cleaning motion being careful not to rub too hard.

Step 3. Repeat Step 1 - Wipe down using a damp soft cloth containing warm soapy water, followed by drying using a soft or microfibre cloth so as not to leave any residue on the product.

Always ensure that you refer to the recommendations provided by the cleaning product manufacturer before use.

Avoid contact with sharp implements.

NOTE DO NOT use any of the following on inBuilt products: Commercial Cleaning Products, Abrasive Cleaners, Scouring Pads or Abrasive Papers, Acids and Alkalis, Solvents, Thinners, Turpentine (Turps), Ammonia, Bleach, Acetone, Easy-Off BAM!, M.E.K. or any other cleaning agents containing organic solvents or the above mentioned products.

